

Intellectual Property Department Ministry of Commerce Publication of Patent Application

THAILAND

Case No.: MI-HFP3576

App. No.:

024747

Filing Date:

December 7, 1994

Title:

DISPOSABLE CAMERA

5

International Classification:

(Int.Cl.)

G 03B 17/02

Applicant:

Achiever Industries Limited

12th Floor, Union Hing Yip Factory

Building, 20 Hing Yip Street

Kwun Tong, Kowloon

Hong Kong

Publication Date:

August 29, 1996

Publication No.:

20241

Last day for opposition:

November 27, 1996

`

- 2

Intellectual Property Department
Ministry of Commerce
Publication of Patent Application

THAILAND
App. No. 024747

241

(19)

กรมทรัพย์สินทางปัญญา (11)

เลขที่ประกาศโฆษณา 020241

กระทรวงพาณิชย์

(43) วันประกาศโฆษณา 2 9 สี.ค. 2539

(12) ประกาศโฆษณาคำขอรับสิทธิบัตรการประดิษฐ์


- (21) เลขที่คำขอ 024747 (22) วันที่ยื่น
 - (22) วันที่ยื่นคำขอ 7 ธันวาคม 2537
- (51) สัญลักษณ์จำแนกการประจิษฐ์ระหว่างประเทศ INt.cl. 5 G 03B $_{17/02}$
- (71) ผู้ขอวับสิทธิบัตร (31) เลขที่กำขอที่ยื่นครั้งแรก 9424561.0 อาชีเฟอร์ อินดัสตรีส สิมิเต็จ
- (72) ผู้ประดิษฐ์ (32) วันยื่นกำขอกรั้งแรก 6 ธันวาคม 2537 นายเตต์ ชาน
- (74) ด้วนทน บายคำเนิน การเค่น และ/หรือ (33) ประเทศที่ยื่นคำขอครั้งแรก อังกฤษ นายค่อพงศ์ โทณะวณิกและ/หรือบายวิรัช ศรีเอบกราธาและ/หรือบายจักรพรรคิ์ มงคลสิทธิ์ 719 ถบบสีพระยา กรุงเทพฯ 10500
- (54) ชื่อที่แสดงถึงการประดิษฐ์ กล้องใช้แล้วทิ้ง
- (57) บทสรุปการประดิษฐ์

กล้องใช้แล้วทิ้งมีลาตัวกล้อง (2) ที่มีห้องอันดับหนึ่ง (6) อยู่ที่ด้านหนึ่งของ หน้าต่างรับแสง (8) เพื่อเป็นที่รับตลับพิล์มลาชเชท (7) ห้องอันดับแรก (10) อยู่ที่ ด้านตรงข้ามของหน้าต่างรับแสง และกล่องพิล์ม (12) โดยที่ในการใช้งานพิล์มจะถูก หมุนออกจากตลับพิล์มลาชเชท (7) เข้าใบในตัวมันเพื่อยื่นอยู่ระหว่างมัน ซึ่งจะถูกใส่ เข้าใบในห้องอันดับสอง

(11) เลขที่ประกาศโฆษณา 0 2 0 2 4 1

ข้อถือสิท<u>ธิ</u>

กล้องใช้แล้วทิ้งที่ห้องอันดับหนึ่งอยู่ที่ด้านหนึ่งของหน้าต่างรับแสง เพื่อเป็น
ที่รับคลับพิล์มคาชเซท ห้องอันดับสองอยู่ที่ด้านตรงข้ามของหน้าต่างรับแสง และมีกล่อง
พิล์มที่ไม่มีม้วนพิล์มซึ่งในการใช้งานพิล์มถูกหมุนจากตลับพิล์มคาชเซทเพื่อยื่นอยู่ระหว่างมัน
โดยในการใช้งานมันใส่อยู่ในห้องอันดับสอง

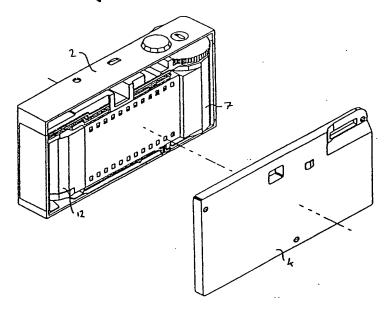

หน้า 1 ของจานวน 1 หน้า

บทสรุปการประติษฐ์

กล้องใช้แล้วทิ้งมีลาตัวกลัง (2) ที่มีห้องอันดับหนึ่ง (6) อยู่ที่ด้านหนึ่งของ หน้าต่างรับแสง (8) เพื่อเป็นที่รับตลับพิล์มคาชเซท (7) ห้องอันดับแรก (10) อยู่ที่ ด้านตรงข้ามของหน้าต่างรับแสง และกล่องพิล์ม (12) โดยที่ในการใช้งานพิล์มจะถูก หมุนออกจากตลับพิล์มคาชเซท (7) เข้าไปในตัวมันเพื่อยื่นอยู่ระหว่างมัน ซึ่งจะถูกใส่ เข้าไปในห้องอันดับสอง

หน้า 1 ของจานวน 6 หน้า

รายละเอียดการบระดิษฐ์

ชื่อที่แสดงถึงการบระดิษฐ์

5

10

15

20

กล้องใช้แล้วทิ้ง

สาขาวิทยาการที่เกี่ยวข้องกับการบระดิษฐ์

การประดิษฐ์นี้เกี่ยวข้องกับกล้องใช้แล้วทิ้ง โดยเฉพาะอย่างยิ่งเกี่ยวกับ กล้องใช้แล้วทิ้งซึ่งจัดให้มีกล่องพิล์ม การประดิษฐ์นี้เป็นการประดิษฐ์ทางวิศวกรรม สาขา วิศวกรรมเครื่องกล

ฏูมิหลังของสาขาวิทยาการที่เกี่ยวข้องกับการประดิษฐ์

กล้องง่าย ๆ ที่รู้จักกันในชื่อกล้องใช้แล้วทิ้งนั้น ในช่วงไม่นานมานี้ได้รับความ สาเร็จพอสมควร กล้องดังกล่าวถูกซื้อพร้อมพิล์มใส่อยู่ภายในเรียบร้อย เพื่อที่ว่าเมื่อใช้ พิล์มหมดแล้ว กล้องถูกส่งพร้อมทุกอย่างใบยังบริษัทล้างพิล์มผู้ซึ่งจะนาพิล์มออกจากกล้อง (ซึ่งกล้องจะถูกทิ้งใบ) และทาการล้างพิล์มต่อใบ

กล้องใช้แล้วทิ้งมีขายในลักษณะที่ใช้พิล์มขนาดต่าง ๆ รวมทั้งขนาด 35 มิลลิเมตรทั่ว ๆ ไป ในกล้องดังกล่าว ในการประกอบ ปลายหน้าของพิล์มจะต่อ เข้ากับแกนม้วนพิล์ม รดยที่แกนม้วนพิล์มและตลับพิล์มคาสเซท ถูกใส่เข้าไปในห้องตามลา ดับอยู่ที่ด้านตรงข้ามของหน้าต่างรับแสงของกล้อง และแล้วผนังหลังจะถูกใส่เข้าไปที่ตัวกล้อง และแล้วพิล์มจะถูกหมุนออกจากตลับพิล์มคาสเซท และเข้าไปที่แกนม้วน เมื่อมีการ ถ่ายรูบ พิล์มจะค่อย ๆ ถูกม้วนกลับเข้าไปในคาสเซทและหมุนออกจากแกนม้วนพิล์ม

บัญหากับกล้องชนิดนี้คือพิล์มภายในกล้องซึ่งถูกหมุนเข้าใบในแกนม้วนพิล์มใต้รับการปกป้องไม่สู้ดีนักจากสภาวะแวดล้อมภายนอก ถึงแม้ว่าพิล์มจะถูกใส่เข้าใบในกล้องก็ตาม แต่เนื่องจากกล้องดังกล่าวถูกขึ้นรูปจากขึ้นส่วนที่ค่อนข้างถูกซึ่งไม่สามารถปิดพิล์มจากสภาวะ แวดล้อมภายนอกได้อย่างมีประสิทธิผล ทาให้พิล์มถูกระทบจากผลของสภาวะแวดล้อมภายนอก คังเช่น ความชื้น ความร้อน ผุ้นและผลภาวะที่อยู่ในอากาศ สิ่งนี้ทาให้คุณภาพของ รูปถ่ายที่ถ่ายจากกล้องดังกล่าวด้อยลง และในกรณีที่ร้ายแรงที่สุดพิล์มอาจถึงขั้นเสียหาย

หน้า 2 ของจานวน 6 หน้า

การแก้ขพราบเท่าจนบัดนี้คือทาการป้องกันกล้องรดยการเก็บกล้องให้อยู่ภาย ในกล่องกันอากาศ รดยกล่องนี้อาจจะขึ้นรูปจากพอยสิ่รลหะ หรือที่ใช้กันบ่อย ๆ คือ วัสดุเคลือบพลาสติกรละหะ อย่างไรก็ตามสิ่งนี้ทาให้ต้นทุนการผลิตสูงขึ้น และมีขั้นตอน การประกอบเพิ่มขึ้น

5 ลักษณะและความมุ่งหมายของการประดิษฐ์รดยย่อ

10

15

20

การประดิษฐ์นี้ "ด้จัดให้มีกล้องที่ใช้แล้วทิ้งซึ่งสามารถแก้ไขหรืออย่างน้อยที่สุดลด ผลของสิ่งแวดล้อมภายนอกที่ท_ีาต่อพิล์ม

ตามการประดิษฐ์นี้ "ดัจัดา ห้มีกล้องาช้แล้วทิ้งที่มีห้องอันดับหนึ่งสาหรับาส่พิล์ม
อยู่ที่ทางด้านหนึ่งของหน้าต่างรับแสง เพื่อ เป็นที่ าส่ตลับพิล์มคาช เซท ห้องอันดับสองสาหรับ
าส่พิล์มอยู่ที่ด้านตรงข้ามของหน้าต่างรับแสงและกล่องพิล์มแบบ "ม่มีแกนม้วนพิล์ม ซึ่งในการ
ใช้งานพิล์มจะถูกหมุน เข้า "ปจากตลับพิล์มคาช เซท เพื่อ ให้พิล์มยื่นอยู่ระหว่างนั้น ซึ่งในการ
ใช้งานจะถูกใส่ เข้า "ปานห้องอันดับสอง

รดยการจัดาหักล่องพิส์มที่ซึ่งพิส์มจะม้วนอยู่ในนั้น พิส์มจะถูกป้องกันจากผลของ สิ่งแวดล้อมภายนอก นอกจากนี้การทาเช่นนี้ยังหมายความว่าพิส์มลาชเซทแบบมาตรฐานสา มารถนามาใช้ได้แทนที่จะต้องใช้วิธีการที่ไม่ได้มาตรฐาน และยุ่งเหยิงยิ่งขึ้นในการที่จะทำ ให้มีพิส์มมาใช้การได้

ในลักษณะที่น่าจะเป็น กล่องพิส์มประกอบด้วยตัวเรือนทรงกระบอกบิดที่ปลาย ตรงข้าม กล่องพิส์มประกอบด้วยขึ้นส่วนรูปร่างคล้ายถ้วยอันดับหนึ่ง ซึ่งถูกบิดด้วยส่วนบลาย ที่แยกขึ้น โดยมีช่องกลางผ่านตัวมัน และมีส่วนที่เป็นปลั๊กใส่อยู่ภายในช่อง ส่วนปลั๊กจะ มีจานที่ยื่นออกด้านนอกที่ช่วยในการบรับตาแหน่งของกล่องพิส์มภายในตัวกล้อง ขึ้นส่วนรูป ร่างคล้ายถ้วยอันดับหนึ่งมีส่วนยื่นตรงกลางอยู่ที่ปลายตรงข้ามกับสุ่วนปลายที่แยกชิ้น ซึ่งใน การใช้จะถูกรับอยู่ในซอกที่เข้ากันภายในตัวกล้อง กล่องพิส์มที่ถูกจัดให้มีลักษณะเช่นนี้ สามารถใส่เข้าในขอกภายในกล้องตรงตาแหน่งที่ซึ่งโดยปกติจะเป็นที่ใส่แกนม้วนพิส์ม

ในอีกลักษณะหนึ่งของการประดิษฐ์ ได้จัดให้มีวิธีการใส่พิล์มเข้าไปในกล้อง 25 ที่ใช้แล้วทิ้งตามชนิดที่มีห้องอันดับหนึ่งอยู่ทางด้านหนึ่งของหน้าต่างรับแสงเพื่อรับตลับพิล์ม

หน้า 3 ของจำนวน 6 หน้า

กาชเซท และห้องอันดับสองอยู่ที่ด้านตรงข้ามของหน้าต่างรับแสงเพื่อรับกล่องพิลุ์ม วิธี การประกอบด้วยขั้นตอนในการ

- (a) นาฟิล์มออกจากตลับฟิล์มคาซเซทและหมุนมันเข้าไปในกล่องฟิล์มที่ไม่มื แกนม้วนฟิล์ม เพื่อให้ฟิล์มยื่นอยู่ระหว่างตลับฟิล์มคาซเซทและกล่องฟิล์ม
- (b) ใส่ตลับพิล์มคาชเซทและกล่องพิล์มเช้าไปในห้องของมันภายในตัวกล้อง ตามลาดับ และ
 - (c) ใส่ฝาหลังของกล้องเข้ากับกล้อง

5

10

15

20

สิ่งที่น่าจะเป็นคือ วิธีการาชักล่องพิล์มที่มีช่องเปิดตามแกนอยู่ที่ปลายด้านหนึ่งของมัน ในขณะที่ขั้นตอน (a) พิล์มถูกหมุนเข้าขบานกล่องพิล์มโดยติดปลายหน้าของพิล์มที่ตอนแรกยื่นจากตลับพิล์มคาชเซทเข้าขบบนเพลาหมุนซึ่งถูกสอดเข้าขบานกล่องพิล์มผ่านช่องเปิดตามแกน เพลาหมุนหมุนเพื่อคลายพิล์มจากตลับพิล์มคาชเซทและเข้าขบานกล่องพิล์มและแล้วเพลาหมุนจะถูกดึงออกและช่องเปิดในกล่องพิล์มจะถูกปิดด้วยบลั๊กที่ปลายแบบถอดได้ วิธีการอาจาชักล่องพิล์มที่มีส่วนปลายแยกชิ้นซึ่งถูกจัดให้มีช่องเปิดตามแกน ส่วนปลายถูกผลักไปอยู่เหนือเพลาก่อนที่จะติดปลายหน้าของพิล์มเข้าขบนเพลาและแล้วส่วนปลายจะถูกใส่ลงบนกล่องพิล์มก่อนที่จะหมุนพิล์มเข้าขบช้างใน

ลักษณะของการบระดิษฐ์นี้จะได้รับการอธิบายต่อไป เคยอาศัยตัวอย่าง และ อ้างถึงรูปเขียนต่อไปนี้ โดยที่ซึ่ง

รูบที่ 1 เป็นรูบเพอร์สเพคทีฟขยายของกล้องใช้แล้วทิ้งแสดงตลับพิล์ม คาชเซทแบบทั่ว ๆ ไป และกล่องพิล์มโดยที่มีพิล์มยื่นอยู่ระหว่างมัน ก่อนที่จะสอดเข้าไปใน กล้อง

- รูปที่ 2 เป็นรูปเพอร์สเพคทีฟขยายของกล้องใช้แล้วทิ้งแสดงลักษณะภายหลัง การสอดตลับพิล์มคาชเซท และกล่องพิล์มเข้าไปในกล้องและก่อนที่จะใส่ผาหลัง
 - รูปที่ 3 เป็นรูบของกล่องพิล์ม
 - รูปที่ 4 เป็นรูปตัดของกล่องพิส์มที่ตัดตามเส้น A-A ของรูปที่ 3
- 25 รูบที่ 5 เป็นรูบตัดของกล่องพิล์มที่ตัดตามเส้น B–B ของรูบที่ 3

หน้า 4 ของจานวน 6 หน้า

รูบที่ 6 เป็นรูปบลายของกล่องพิส์ม

รูปที่ 7 เป็นรูปตัดของกล่องพิล์มที่ตัดตามเส้น C-C ของรูปที่ 3

รูปที่ 8 เป็นรูปปลายตรงข้ามของกล่องพิล์มซึ่งตรงข้ามกับบลายของรูปที่ 6

รูบที่ 9 (a) เป็นรูบตัดของส่วนปลายของกล่องพิล์มก่อนที่จะใส่ปลั๊กที่บลาย

รูปที่ 9 (b) เป็นรูปตัดของส่วนปลายของกล่องพิส์มหลังจากที่สอดบลั๊กที่ปลาย และ

รูปที่ 10 เป็นรูปตัดของกล่องพิล์มที่มีเพลาใส่พิล์มสอดอยู่ช้างใน

การเปิดเผยการประดิษฐ์รดยสมบูรณ์

5

10

15

20

อ้างถึงรูปเขียน ตามที่แสดงในรูปที่ 1 กล้องประกอบด้วยลาตัวกล้อง 2 ที่ ใช้แล้วทิ้งแบบทั่ว ๆ ไป โดยที่มีฝาหลัง 4 ลาตัวกล้อง 2 ประกอบด้วยห้องอันดับหนึ่ง 6 สาหรับรับตลับพิล์มคาชเซทซึ่งมีขนาดและรูปร่าง ในการที่จะรับตลับพิล์มคาชเซทแบบทั่ว ๆ ไปได้ดังเช่นเป็นตลับพิส์มคาชเชท แบบ 35 มิลลิเมตรทั่ว ๆ ไป ตามที่แสดงใน 7 รูบที่ 1 และ 2 ลำตัวกล้อง 2 ประกอบด้วยห้องอันดับสอง 10 อยู่ที่ด้านตรงข้ามกัน ของหน้าต่างรับแสง 8 ในกล้องใช้แล้วทิ้งแบบทั่ว ๆ ไปนี้ ห้องอันดับสอง 10 มีแกน ม้วนพิล์มแยกที่ซึ่งพิล์มจะต่อ เ ข้าก่อนที่จะใส่ผาหลัง ตามการประดิษฐ์นี้แกนม้วนพิส์มถูกแทน ที่แยกต่างหาก ซึ่งบนกล่องพิล์ม 12 นี้ พิล์ม 13 จะถูกหมุนใน ด้วยกล่องพิล์ม 12 ความมืดก่อนที่จะใส่เข้าขบานกล้องเพื่อที่ว่าพิส์ม 13 จะยื่นอยู่ระหว่างตลับพิส์มคาชเซท 7 และกล่องพิล์ม 12 รูปที่ 2 แสดงตลับพิล์มคาชเซท 7 และกล่องพิล์ม 12 ให้ เข้าไปในห้องของมันตามลำดับ เพื่อที่ว่าพิส์มจะอยู่เหนือหน้าต่างรับแสง ต่อมาผาหลัง 4 จะถูกใส่ลงบนลาตัวกล้อง 2 โดยทั่ว ๆ ไป ในกล้องดังกล่าวได้จัดให้มีอุปกรณ์ที่ยอมให้ ผาหลัง 4 ใส่แบบเข้าที่ทันทีทันใดเข้าไปที่ลาตัวกล้อง 2 แต่ซึ่งป้องกันผาหลังไม่ให้หลุด ออกรดยผู้ใช้ได้ ช่องเปิดในกล้องถูกจัดอยู่ที่ด้านล่างของห้องอันดับหนึ่ง 6 ซึ่งถูกปิดรดย ที่เป็นแผ่นแยกต่างหาก แผ่น 11 สามารถถอดออกฯด้ที่ศูนย์ล้างฟิล์มเพื่อยอม ให้นาพิส์บออกฯด้

กล่องฟิล์ม 12 ประกอบด้วยส่วนลาตัว 14 โดยทั่ว ๆ ไบ เป็นรูปถ้วยทรง 25 กระบอกที่ไม่มีแกนม้วนฟิล์ม โดยมีส่วนยื่นบน 15 ตรงกลางซึ่งใส่เข้าไปในซอก 18 ที่

หน้า 5 ของจานวน 6 หน้า

อยู่ในตาแหน่งที่เข้ากันได้อยู่ในห้องอันดับสอง กล่องฟิล์มถูกบิดรดยส่วนบลาย 10 ที่แยกขึ้นส่วนปลาย 16 ถูกจัดให้มีช่องกลาง 18 เห็นได้ดีที่สุดในรูบ 9(a) ซึ่งถูกบิด รดยปลั๊ก 20 **ที่มี**จาน ้ยื่นออกด้านนอก จาน 22 ยังทาหน้าที่เป็นตัวกาหนด 22 ต_{ำแหน่งให้กับฐานของกล่องพิล์ม} าด้อย่างแม่นยาภายในช่องซึ่งรดยทั่ว ๆ าบจัดาว้ 12 เพื่อรับฐานของม้วนพิส์ม 22 นี้ยังทาหน้าที่เป็นกับดักแสงเพิ่มเติมสาหรับฐานของ จาน กล่องฟิล์ม กล่องฟิล์มมีช่อง 24 ที่ซึ่งได้การใช้งานฟิล์มยื่นผ่าน ช่อง 24 จะถูกบุด้วยสัก ตามที่แสดงในรูบที่ 5 เพื่อป้องกันการขีดข่วนของพิส์มรดยอยู่ที่ด้านข้างของ 26 แถบกั้น 28 ถูกจัดอยู่ที่ส่วนลาดัว 14 ในขณะที่ส่วนปลาย 16 ถูกจัดให้มีชอก ช่อง ที่เข้ากันฯด้ซึ่งใส่เข้าไปฯด้แบบทันทันใดเข้ากับแถบกั้น เพื่อยึดส่วนบลาย 16 ให้ 28 อยู่กับที่

กล่องพิล์มน่าจะขึ้นรูบจากวัสดุพลาสติกคล้าย ๆ กับที่าช้านส่วนอื่น ๆ ของลา ตัวกล้อง

10

15

20

25

พิล์มถูกบรรจุตามขั้นตอนที่จะอธิบายดังต่อฯปนี้ เพลาหมูน 30 ที่ถูกขับแยก ต่างหากถูกใช้ในการหมุนพิล์มเช้าใบในกล่องพิล์ม ตามที่แสดงในรูปที่ 10 ก่อนที่ 12 ฟิล์มจะติดเช้ากับเพลาหมุน 30 ž uu ส่วนปลาย 16 ของกล่องพิล์มจะถูกใส่อยู่เหนือ เพลาเพื่อที่ว่าเพลาหมูน 30 จะยื่นผ่านช่อง 18 ปลายนาของพิล์ม 13 ถูกดึงจาก ตลับฟิล์มคาชเซท 7 และนาเข้า**ไบในช่อง** 32 ในเพลาหมุน 30 ส่วนล**า**ตัว 14 ชอง กล่องพิล์มจะถูกผลักไบเหนือเพลาหมุน 30 เพื่อที่ว่าพิล์มจะยื่นผ่านช่อง 24 และแล้วจะ ใส่ลงบนปลายของส่วน 16 โดยที่แถบกั้น 28 ใส่แบบเข้าที่ใด้ทันทีเข้าไปในซอก ส่วน ปลายของเพลาหมูน 30 ถูกรับอยู่ภายในซอก 34 ของกล่องพิล์มซึ่งถูกล้อมรอบภายใน ด้วยส่วนยื่น 15 และแล้วเพลาหมุน 30 จะถูกหมุนเพื่อม้วนพิล์มจากตลับพิล์มคาซเซท 7 เข้าไปในกล่องพิส์น ภายหลังจากที่พิล์มถูกนาออกทั้งหมดจากตลับพิล์ม 12 อันดับสอง คาชเชท 7 แล้ว เพลาหมูน 30 จะถูกดึงออกตามแกนปล่อยให้พิล์มม้วนอยู่ภายใน กล่องพิล์ม และช่อง 18 ถูกบิครดยปลั๊ก 20 ตลับพิล์มคาชเชท 7 และกล่องพิล์ม จะถูกใส่เข้าไปในลาตัวกล้อง 2 และผาหลัง 4 จะถูกใส่เข้าใบกับลาตัวกล้อง

หน้า 6 ของจานวน 6 หน้า

อุปกรณ์บรรจุพิส์มที่เหมาะสมสามารถนามาใช้เพื่อปฏิบัติหน้าที่ต่าง ๆ ของกระบวนการนี้ ซึ่งเป็นที่เห็นได้ชัดเจนสาหรับบุคคลผู้ที่มีความชานาญในศิลปะ

จากการที่พิส์มถูกาส่เข้าขบานกล่องพิส์ม 12 แล้วก็ทาให้พิส์มาด้รับการบ้อง กันอย่างดีจากอิทธิพลของสิ่งแวดล้อมภายนอกาด้

5 <u>วิธีการบระดิษฐ์ที่ดีที่สุด</u>

เช่นเดียวกันกับที่ได้บรรยายไว้ในการเปิดเผยการประดิษฐ์โดยสมบูรณ์ทุกประการ

หน้า 1 ของจานวน 2 หน้า


<u>ข้อถือสิทธิ</u>

5


- 1. กล้องาชีแล้วทิ้งที่ห้องอันดับหนึ่งอยู่ที่ด้านหนึ่งของหน้าต่างรับแสงเพื่อเป็น ที่รับตลับพิส์มคาชเซท ห้องอันดับสองอยู่ที่ด้านตรงข้ามของหน้าต่างรับแสง และมีกล่อง พิส์มที่ไม่มีม้วนพิส์มซึ่งในการใช้งานพิส์มถูกหมุนจากตลับพิส์มคาชเซทเพื่อยื่นอยู่ระหว่างมัน โดยในการใช้งานมันใส่อยู่ในห้องอันดับสอง
- 2. กล้องใช้แล้วทิ้งตามชื่อถือสิทธิ 1 โดยที่ซึ่งกล่องพิส์มประกอบด้วยตัว เรือนทรงกระบอกบิดที่ปลายตรงข้าม
- 3. กล้องใช้แล้วทิ้งตามข้อถือสิทธิ 2 โดยที่ซึ่งกล่องพิล์มประกอบด้วยชิ้นส่วน รูปร่างคล้ายถ้วยอันดับหนึ่งซึ่งปิดรดยส่วนปลายแยกต่างหากซึ่งมีช่องตรงกลางผ่านมัน และ 10 มีส่วนที่เป็นบลั๊กรับอยู่ภายในช่อง
 - 4. กล้องใช้แล้วทิ้งตามข้อถือสิทธิ 3 โดยที่ซึ่งส่วนปลั๊กมีจานยื่นออกด้านนอก ซึ่งช่วยกาหนดตาแหน่งที่ถูกต้องของกล่องพิล์มภายในลาตัวกล้อง
 - 5. กล้องใช้แล้วทิ้งตามข้อถือสิทธิ 3 หรือ 4 ข้อใดข้อหนึ่งโดยที่ซึ่งขึ้นส่วน รูปร่างคล้ายถ้วยอันคับหนึ่งมีส่วนยื่นตรงกลางอยู่ที่ปลายตรงข้ามกันกับส่วนปลายแยกต่างหาก ซึ่งในการใช้งานใส่อยู่ในซอกที่เข้าชุดกันอยู่ในลาตัวกล้อง
 - 6. วิธีการบรรจุพิล์ม เช้าไบในกล้องที่ใช้แล้วทิ้งของกล้องชนิดที่มีห้องอันดับ หนึ่งอยู่ที่ด้านหนึ่งของหน้าต่างรับแสง เพื่อ เป็นที่รับตลับพิล์มคาซ เซท และห้องอันดับสอง อยู่ที่ด้านตรงช้ามของหน้าต่างรับแสง เพื่อ เป็นที่รับกล่องพิล์ม วิธีการประกอบด้วยขั้นตอนใน การ
- 20 (a) นาฟิล์มออกจากตลับฟิล์มคาชเซท และม้วนมันเช้าไปในกล่องฟิล์มที่ไม่ มีม้วนฟิล์ม เพื่อให้ฟิล์มยื่นอยู่ระหว่างตลับฟิล์มคาชเซทและกล่องฟิล์ม
 - (b) ใส่ตลับพิล์มคาชเซทและกล่องพิล์มเช้าใบในห้องตามลาดับในลาตัวกล้อง และ
 - (c) ใส่ผาหลังเช้ากับลาตัวกล้อง


หน้า 2 ของจานวน 2 หน้า


- 7. วิธีการตามข้อถือสิทธิ 5 ซึ่งใช้กล่องพิล์มที่มีช่องเปิดตามแกนที่ปลายด้าน หนึ่งของมัน รดยที่ในขั้นตอน (a) พิล์มถูกหมุนเข้าไปในกล่องพิล์ม รดยการติดปลายนา ของพิล์มซึ่งในตอนแรกยื่นจากตลับพิล์มดาชเซทเข้าไปบนเพลาหมุนซึ่งถูกสอดเข้าไปในกล่อง พิล์มผ่านช่องเปิดตามแกน เพลาหมุนจะหมุนเพื่อคลายพิล์มออกจากตลับพิล์มดาชเซทและ ให้พิล์มเข้าไปในกล่องพิล์ม และเพลาถูกนาออก และช่องเปิดในกล่องพิล์มถูกบิดด้วย ปล็กที่ปลายที่ถอดออกได้
- 8. วิธีการตามข้อถือสิทธิ 7 โดยที่ใช้กล่องพิล์มที่มีส่วนปลายแยกต่างหาก ซึ่งถูกจัดให้มีช่องเบิดตามแกน โดยที่ส่วนปลายถูกผลักไปเหนือเพลาหมุนก่อนที่จะติดปลาย นาของพิล์มลงบนเพลาหมุน และแล้วส่วนปลายจะถูกใส่ลงบนกล่องพิล์มก่อนที่จะหมุนพิล์ม เข้าใน
- 9. กล้องใช้แล้วทิ้งค่อนช้า เหมือนกับที่ใต้อธิบายในที่นี้ และแสดงในรูปที่ 1 หรือ 2 โดยที่อาจจะเลือกให้ร่วมกับลักษณะของรูปที่ 3 ถึง 9 ใด ๆ ของรูปเขียนที่แนบ มาด้วย
- วิธีการบรรจุพิล์มเข้าไปในกล้องใช้แล้วทิ้งค่อนข้างเหมือนกันที่ได้อธิบาย
 ไปในที่นี้ และตามที่แสดงในรูปที่ 1, 2 และ 10 ของรูปเขียนที่แนบมาด้วย

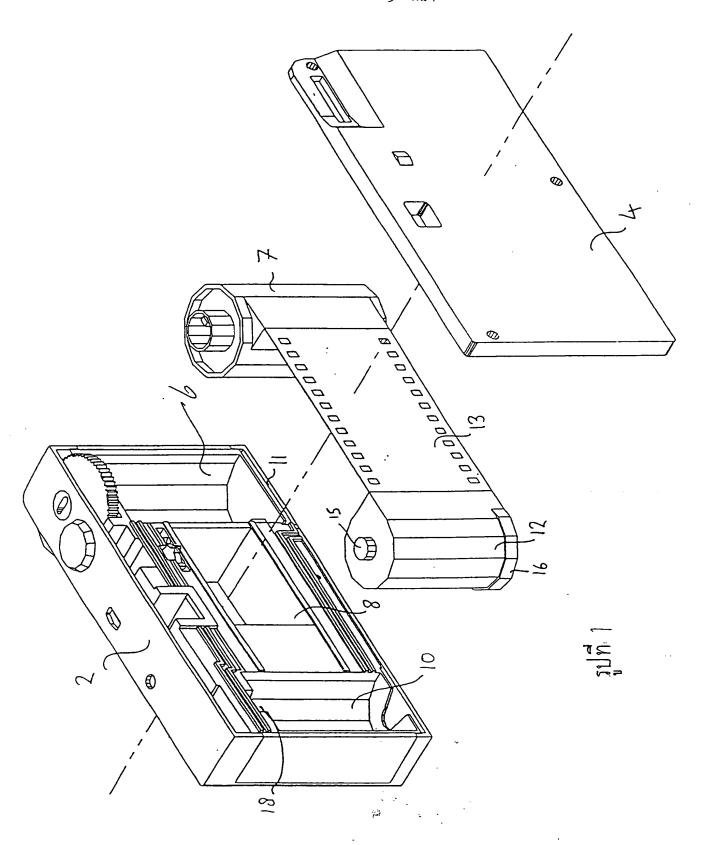



٠...

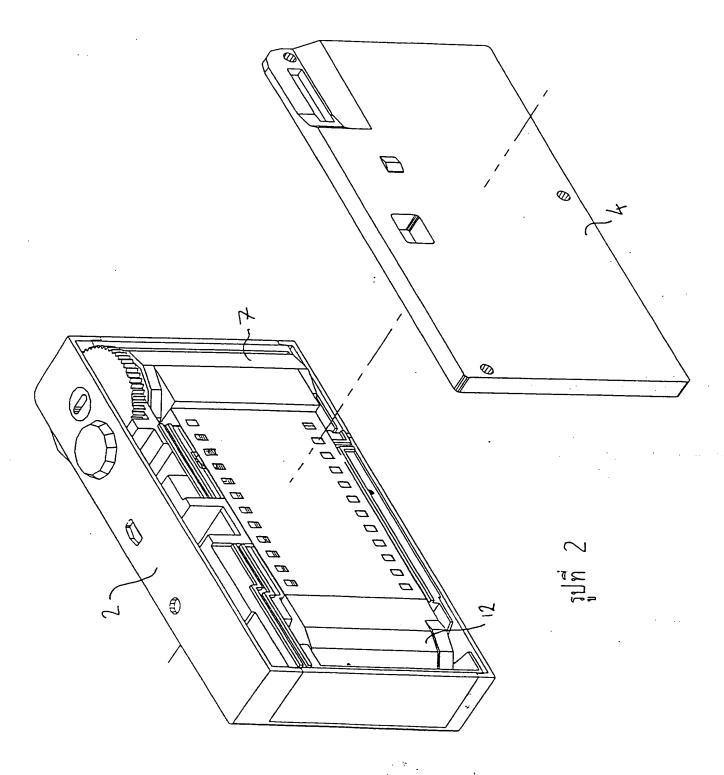


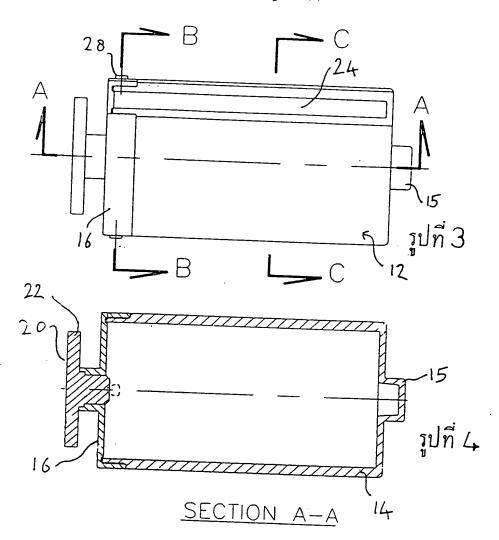


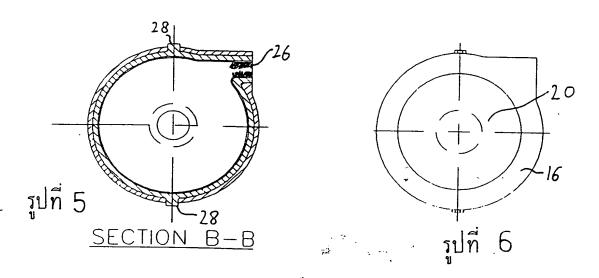


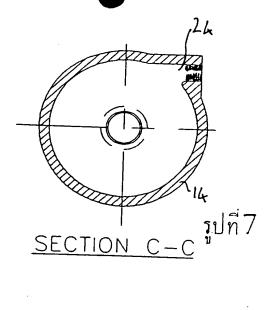

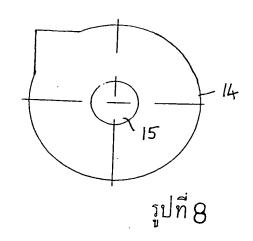

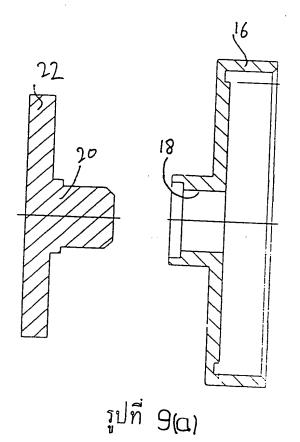

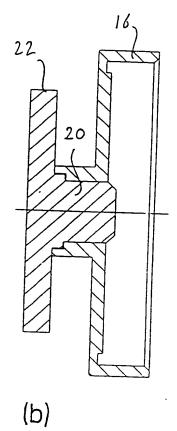

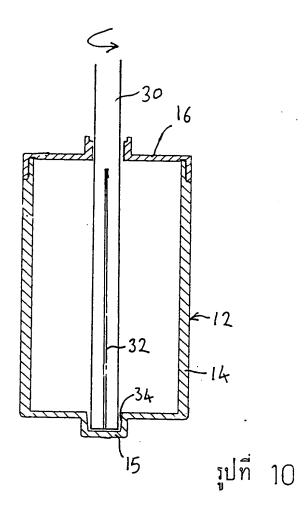

هو شور د

DISPOSABLE CAMERA

The present invention relates to a disposable camera, and in particular to a disposable camera provided with a film receiving cartridge.

5

Simple cameras of the type known as disposable cameras have recently enjoyed considerable success. Such cameras are purchased with a film already fitted inside so that when the film has been used up, the camera is returned in its entirety to the film processing company who remove the film from the camera (which is then disposed of) and process the film.

15

20

10

Disposable cameras are available which utilize a variety of film formats, including conventional 35 mm films. In such cameras, on assembly, the leading end of the film is connected to a spool, with the spool and film cassette being placed in the respective chambers on opposite sides of the exposure window of the camera. The back is then fitted onto the camera. The film is then unwound from the cassette and onto the spool. As pictures are taken the film is progressively wound back into the cassette and unwound from the spool.

25

A problem with this type of camera is that the film inside

the camera which is wound on the spool is poorly protected from the external environment. Although the film is housed in the camera, since such cameras are formed of relatively cheap components which do not effectively seal the film from the external environment, the film is subject to the effects of the external environment, such as moisture, heat, dust and airborne pollutants. This detracts from the quality of the photographs which can be taken from such cameras, and in extreme cases can mean that a film is ruined.

The solution so far has been to protect the camera by sealing this inside an airtight package. This may be formed of a metal foil material, or as is commonly the practice, a metallized plastics laminate material. This however adds to the production cost and number of assembly steps.

The present invention seeks to provide a disposable camera which overcomes or at least reduces the effects of the external environment on the film.

According to the present invention there is provided a disposable camera having a first film chamber on one side of an exposure window for receiving a film cassette, a second film chamber on the opposite side of the exposure

خشت

25

5

10

15

window, and a spoolless film-receiving cartridge into which in use the film is wound from a film cassette so as to extend therebetween, which in use is fitted into the second film chamber.

5

By providing a film cartridge into which the film is wound, the film is protected against the effects of the external environment. Moreover, this arrangement still means that a standard film cassette can be utilised, rather than using any more complicated non-standard means of providing the film.

In the preferred embodiment the film receiving cartridge

15

10

comprises a cylindrical housing closed at opposite ends. The film receiving cartridge consists of a first cup-shaped component which is closed by a separate end part which has a central aperture therethrough, and a plug part received within the aperture. The plug part has an outwardly extending flange which assists in correct location of the cartridge in the camera body. The first cup-shaped component has a central protrusion at the end opposite to the separate end part which in use is received in a corresponding recess in the camera body. The cartridge provided with these features can fit into the recess in the camera conventionally occupied by the film-spool.

25

In a further aspect the invention provides a method of loading a film into a disposable camera of the type having a first chamber on one side of an exposure window for receiving a film cassette, and a second film chamber on the opposite side of the exposure window for receiving a film-receiving cartridge, the method comprising the steps of:

- (a) withdrawing the film from a film cassette and winding this into a spoolless film receiving cartridge so that the film extends between the cassette and cartridge;
- (b) fitting the film cassette and cartridge into respective chambers in the camera body; and
- (c) fitting a camera back onto the camera.

Preferably, the method employs a film cartridge which has an axial opening at one end thereof, whilst in step (a) the film is wound into the cartridge by attaching the leading end of the film initially protruding from the film cassette onto a rotatable shaft which is inserted into the cartridge via the axial opening, the shaft rotated to unwind the film from the film cassette and into the cartridge, and the shaft withdrawn and the opening in the cartridge closed with a detachable end plug. The method may employ a cartridge which has a separate end part which is provided with the axial opening, the end part being pushed over the shaft prior to attachment of the leading end of the film

غمتر

25

20

5

10

onto the shaft, and the end part then being fitted onto the cartridge prior to rolling the film therein.

An embodiment of the invention is now described, by way of example, with reference to the following drawings in which:

5

10

15

20

25

Figure 1 is an exploded perspective view of the disposable camera showing a conventional film cassette and film-receiving cartridge with the film extending therebetween, prior to their insertion into the camera;

Figure 2 is an exploded perspective view of the disposable camera after insertion of the film cassette and film receiving cartridge into the camera, and prior to fitting of the camera back;

Figure 3 is a view of the film receiving cartridge;

Figure 4 is a cross-sectional view of the film-receiving cartridge taken on the line A-A of Figure 3;

Figure 5 is a cross-sectional view of the film-receiving cartridge taken along the line B-B of Figure 3;

Figure 6 is an end view of the film-receiving cartridge;

Figure 7 is a cross-sectional view of the film-receiving cartridge taken along the line C-C of Figure 3;

Figure 8 is a view of the opposite end of the film-receiving cartridge to the view of Figure 6;

Figure 9(a) is a cross-sectional view of an end part of the film-receiving cartridge before insertion of the end plug;

Figure 9(b) is a cross-sectional view of the end part of the film-receiving cartridge after insertion of the end plug; and

Figure 10 is a cross-sectional view of the film-receiving cartridge with a film loading shaft inserted therein.

5

10

15

20

25

Referring to the drawings, as shown in Figure 1, the camera includes a conventional disposable camera body 2 with a The camera body 4 includes a film separate back 4. cassette receiving chamber 6 which is dimensioned and shaped to receive a conventional film cassette, such as a conventional 35 mm cassette 7, as shown in Figures 1 and 2. The body 4 includes, on the opposite side of an exposure window 8, a second chamber 10. In the conventional disposable camera this chamber 10 houses a separate spool to which the film is connected prior to fitting of the camera back. In accordance with the invention, the spool is replaced by a separate film cartridge 12, into which the film 13 is wound in darkness before this is fitted into the camera, so that the film 13 extends between the cassette 7 and the cartridge 12. Figure 2 shows the film cassette 7 and film-receiving cartridge 12 fitted into the respective chambers, so that the film lies over the exposure window. Subsequent to this the back 4 is fitted onto the camera body 2. Generally, in such cameras there are provided means to allow the back 4 to be snap-fitted onto the body 2, but which prevent the back from being detached by the user. An opening in the camera is provided beneath the chamber 6, which is closed by a separate plate 11, the plate 11 being removable at the laboratory to allow removal of the film.

5

10

15

20

25

cartridge 12 comprises a spoolless cylindrical cup-shaped body part 14 which has a central upper protrusion 15 which fits into a complimentary locating recess 18 in the second chamber 10. The cartridge is closed by a separate end part 16. The end part 16 is provided with a central aperture 18 best seen in Figure 9(a) which is closed by a plug 20 which has a outwardly extending flange 22. This flange 22 serves to accurately locate the base of the cartridge 12 in conventionally provided to receive the base of a spool. This flange 22 also serves as an additional light-trap for the base of the cartridge. The cartridge has a slot 24 through which in use the film extends. The slot 24 is lined with velvet 26 as shown in Figure 5 to prevent scratching of the film on the sides of the slot. Locating tabs 28 are provided on the body part 14 whilst the end part 16 is provided with corresponding recesses which snapfit over the locating tabs 28 in order to hold the end part 16 in place.

The cartridge is preferably formed of a plastics material similar to that employed in the rest of the camera body.

The is loaded according to the procedure described. A separate driven winding shaft 30 is used to wind the film into the cartridge 12 as shown in Figure 10. Before the film is attached to the shaft 30, the end part 16 of the cartridge is fitted over the shaft so that the shaft 30 protrudes through the aperture 18. The leading end of the film 14 is pulled from the cassette 7 and led into a slot 32 in the shaft 30. The body 14 of the cartridge is then pushed over the shaft 30 so that the film extends through the slot 24, and is then fitted onto the end of part 16 with the locating tabs 28 snap-fitting into The end part of the shaft 30 is received the recesses. within a recess 34 of the cartridge internally defined by the protrusion 15. The shaft 30 is then rotated to wind the film from the film cassette 7 into the second cartridge 12. Once the film has been fully withdrawn from the cassette 7, the shaft 30 is axially withdrawn leaving the film wound inside the cartridge, and the aperture 18 is sealed by the plug 20. The cassette 7 and cartridge 12 are then fitted into the camera body 2 and the back 4 fitted Appropriately adapted film loading machines can by utilised to carry out this procedure as will be readily apparent to the person skilled in the art.

فمتر

25

5

10

15

With the film housed inside the cartridge 12, the film is well protected against external environmental influences.

CLAIMS

- 1. A disposable camera having a first film chamber disposed on one side of an exposure window for receiving a film cassette, a second film chamber on the opposite side of the exposure window, and a spoolless film-receiving cartridge into which in use the film is wound from a film cassette so as to extend therebetween, which in use is fitted into the second film chamber.
- 2. A camera according to claim 1 wherein the film receiving cartridge comprises a cylindrical housing closed at opposite ends.
- 3. A camera according to claim 2 wherein the filmreceiving cartridge consists of a first cup-shaped
 component which is closed by a separate end part which
 has a central aperture therethrough, and a plug part
 received within the aperture.
- 4. A camera according to claim 3 wherein the plug part has an outwardly extending flange which assists in correct location of the cartridge in the camera body.
- 5. A camera according to claim 3 or 4 wherein the first

25

20

5

10

cup-shaped component has a central protrusion at the end opposite to the separate end part which in use is received in a corresponding recess in the camera body.

- 5 6. A method of loading a film into a disposable camera of the type having a first chamber on one side of an exposure window for receiving a film cassette, and a second film chamber on the opposite side of the exposure window for receiving a film-receiving cartridge, the method comprising the steps of:
 - (a) withdrawing the film from a film cassette and winding this into a spoolless film receiving cartridge so that the film extends between the cassette and cartridge;
 - (b) fitting the film cassette and cartridge into respective chambers in the camera body; and
 - (c) fitting a camera back onto the camera.

15

7. A method according to claim 5 employing a film
20 cartridge which has an axial opening at one end
thereof wherein in step (a) the film is wound into the
cartridge by attaching the leading end of the film
initially protruding from the film cassette onto a
rotatable shaft which is inserted into the cartridge
via the axial opening, the shaft rotated to unwind the
film from the film cassette and into the cartridge,

di

and the shaft withdrawn and the opening in the cartridge closed with a detachable end plug.

- 8. A method according to claim 7 employing a cartridge which has a separate end part which is provided with the axial opening, the end part being pushed over the shaft prior to attachment of the leading end of the film onto the shaft, and the end part then being fitted onto the cartridge prior to rolling the film therein.
- 9. A disposable camera substantially as hereinbefore described and illustrated in Figure 1 or 2, optionally in combination with any of Figures 3 to 9 of the accompanying drawings.
- 10. A method of loading a film into a disposable camera substantially as hereinbefore described and as illustrated in Figures 1, 2 and 10 of the accompanying drawings.

20

5

10

ABSTRACT


Disposable Camera

5


10


A disposable camera has a camera body (2) having first film chamber (6) disposed on one side of an exposure window (8) for receiving a film cassette (7), a second film chamber (10) on the opposite side of the exposure window, and a film-receiving cartridge (12) into which in use the film is wound from the film cassette (7) so as to extend therebetween, which is fitted into the second film chamber.


Figure 1

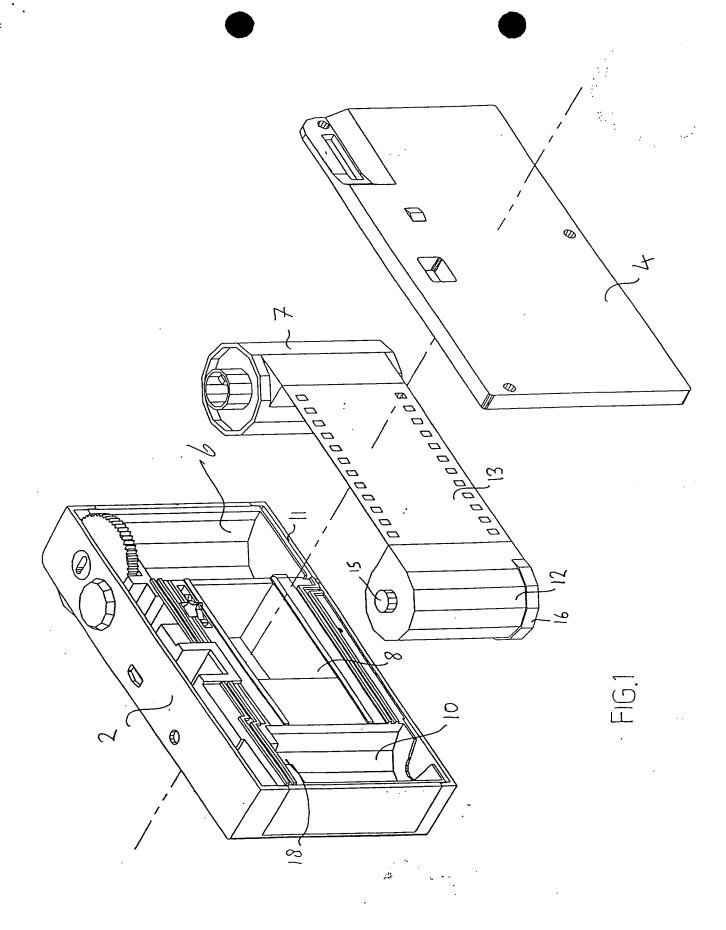



....

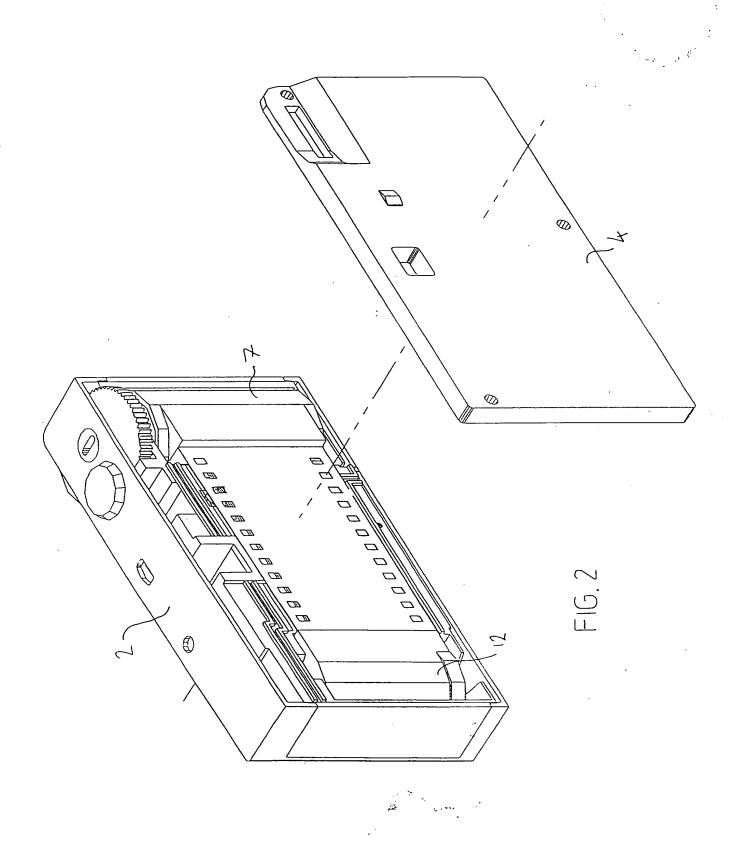


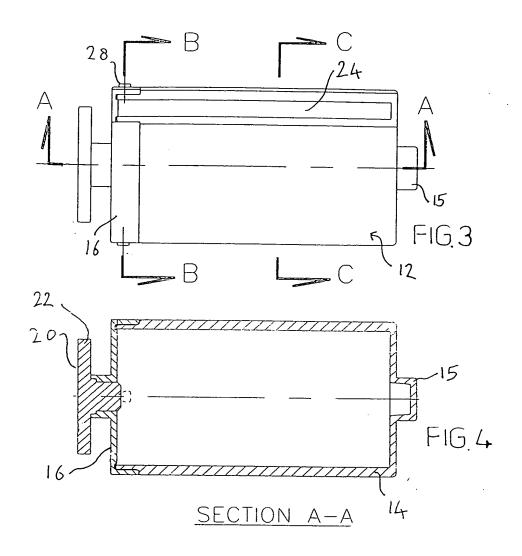

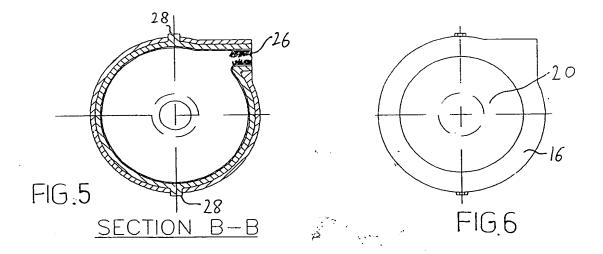

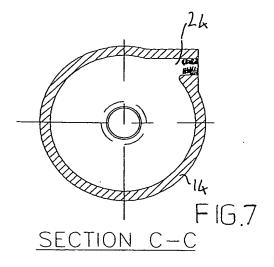

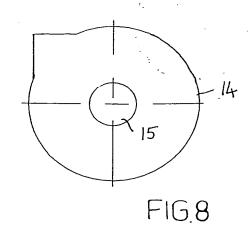

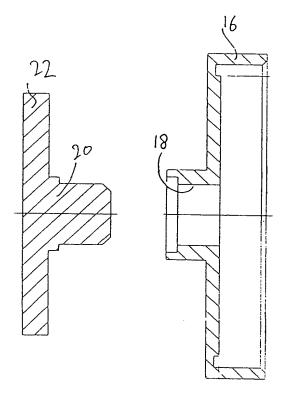


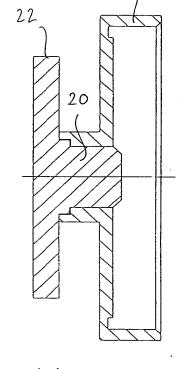


FIG. 9(a)

(b)

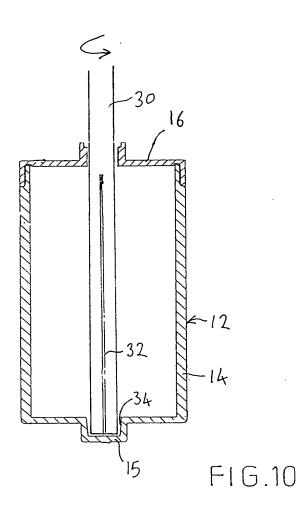

عين

• •

.